



Versa•Touch™

Versatile by design, this remote system features a sleek, attractive appearance with a convenient wall plate bracket that covers any existing light switch. Operated from the wall or your hand, it provides three fan speeds forward and reverse with a full-spectrum light dimming. Use one Versa-Touch to control several fans, or purchase extra controls to operate one fan from different locations. The W-43 Versa-touch control allows separate up-light and down-light control where applicable (see fan section for details).



W42 hand held or wall mounted remote control unit features 3 speeds forward and reverse. Light control features full light spectrum dimming and memory.

W43 hand held or wall mounted remote control unit features 3 speeds forward and reverse Light control features up light and down light full light spectrum dimming and memory.

VERSA•TOUCH © W-42 & W-43 INSTALLATION



W-42 CONTROL



W-43 CONTROL



W-42 & W-43 CONTROL HOLDER



9V BATTERY



DRYWALL ANCHOR 6-32 - (2)



DRYWALL SCREW 1" - (2)



SCREW 6-32 X 3/8" - (2)



SCREW 6-32 X 1" - (2)


Versa-Touch Wall Controls - **CONTINUED**



Versa-Touch2 Wall Controls - **CONTINUED**

VERSA•TOUCH© W-42 & W-43 CONTROL HOLDER INSTALLATION

CAUTION! Do not use with wall dimmer.

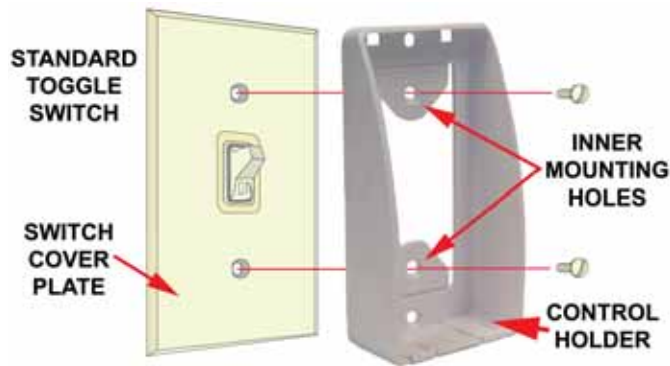

Standard Light Switch

- Step 1. Remove the two screws holding the switch cover plate. Do not remove the cover plate.
- Step 2. Orient the control holder as shown and line up the two inner mounting holes with those on the switch.
- Step 3. Install and tighten screws by hand only.



Rocker Light Switch


- Step 1. Remove the two screws holding the switch cover plate. Do not remove the cover plate.
- Step 2. Break off the two tabs by pushing outward.
- Step 3. Orient the control holder as shown and line up the two outer mounting holes with those on the cover plate.
- Step 4. Install and tighten screws by hand only.

VERSA•TOUCH © W-42 & W-43 HOLDER INSTALLATION / STORAGE

Wall Installation

- Step 1. Locate a 2x4 wall stud in a convenient location.
- Step 2. Orient the control holder as shown over the 2x4 stud.
- Step 3. Use the 1" wood screws in either the inner or outer mounting holes. Install and tighten screws by hand only.

Note: The wall anchors and 6-32 x 1" screws may be used in situations where mounting to a stud is not possible. Use the inner mounting holes. After securing the anchor, discard the anchor's pointed screws and use the 6-32 decor ovalhead screws supplied.

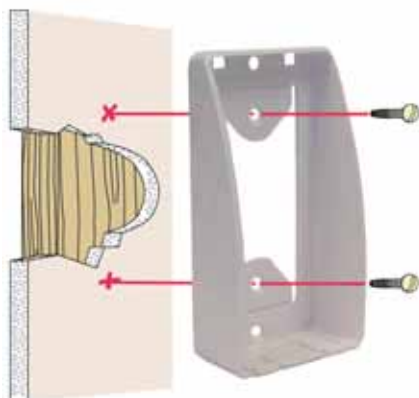

ANCHOR PANHEAD SCREW



DRYWALL ANCHOR



WOOD SCREW 1"

Versa-Touch2 Wall Controls - **CONTINUED**



PLACING CONTROL IN HOLDER

Control Storage

Angle control in top first until the unit can be gently pushed back and snapped into place.



DECOR OVALHEAD SCREW
6-32 X 1"


Removing Control

Gently Pull the lower edge of the control out from the holder.

VERSA•TOUCH® BATTERY INSTALLATION

Remove Battery Door

Turn control on its front. Twist a coin to unsnap the door **A**. Lift door away from control **B** and remove **C**.

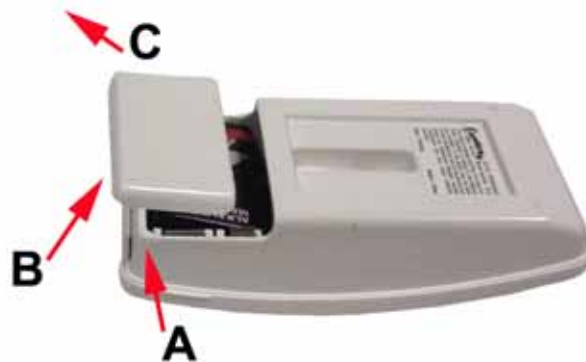

Install Battery

Press battery into control aligned as shown. Observe proper polarity. Replace the battery door.



SNAP PLUG SOCKET

Changes or modifications not expressly approved in writing by Casablanca Fan Co. may void the user's authority to operate this equipment.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Versa-Touch Wall Controls - **CONTINUED**



VERSA•TOUCH W-43 OPERATION

Fan Control

To start the fan, press the selected speed button to run the fan at the desired speed.

LO=Low speed MED=Medium speed HI=High speed

To turn off the fan, press the **FAN OFF** button.

Airflow Direction

To reverse the airflow press the **REVERSE** button. Reverse operates at any speed whether fan is on or off. The fan returns to its set speed after reversing.

Light Control

Turn the light on or off independently from the fan by pressing the **UP LIGHT, DOWN LIGHT, OR BOTH** button. (This is a rocker switch. Press the left side for the Up Light, right side for the Down Light, and the middle for both.) Hold the button in excess of 0.7 seconds, it becomes a dimmer. The light varies from 'bright' to 'dim' over approximately 8 seconds. This sequence will reverse the light when it reaches the brightest or dimmest level if you continue to hold the **LIGHT** button. Release the button when the desired level is reached.

Auto Resume

Quick press (less than 0.7 seconds) on/off operation of the **LIGHT** button maintains the desired brightness level set previously.



VERSA•TOUCH W-42 OPERATION

SEND SIGNAL LED

Fan Control

To start the fan, press the selected speed button to run the fan at the desired speed.

LO = Low speed MED = Medium speed HI = High speed

To turn off the fan, press the **FAN OFF** button.

Airflow Direction

To reverse the airflow press the **REVERSE** button. Reverse operates at any speed whether fan is on or off. The fan returns to its set speed after reversing.

Light Control

Turn the light on or off independently from the fan by pressing the **LIGHT** button.

Hold the button in excess of 0.7 seconds, it becomes a dimmer. The light varies from 'bright' to 'dim' over approximately 8 seconds. This sequence will reverse the light when it reaches the brightest or dimmest level if you continue to hold the **LIGHT** button. Release the button when the desired level is reached.

Auto Resume

Quick press (less than 0.7 seconds) on/off operation of the **LIGHT** button maintains the desired brightness level set previously.



Versa-Touch Wall Controls - **CONTINUED**



VERSA•TOUCH © CHANGING FREQUENCY SETTING W-42/W-43

Note: All fans leave the factory set to '00000'.

FIVE DIGIT DIP SWITCH Remote Setting

Step 1. Remove battery.


Step 2. Check that the dip switch in the remote is set to '01001' - as shown.

Step 3. Check that the dip switch in the receiver is set the same. (See section below for fan dip switch location)




VERSA•TOUCH © CHANGING FREQUENCY SETTING - RECEIVER

NOTE: If this is the second Versa•Touch fan installed in the same area, one of the fans **MUST** have its channel changed from '01110' or interference will occur. Make sure that the dip switch settings in both the second remote and second fan are set to the same numbers.

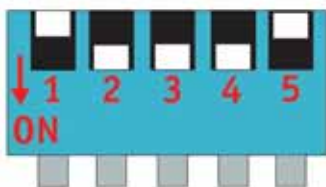


DIP SWITCH SET TO 01110

FAN #1

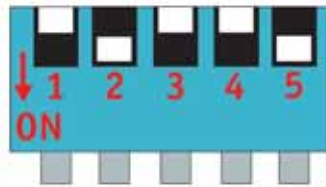

DIP SWITCH SET TO 01001

FAN #2

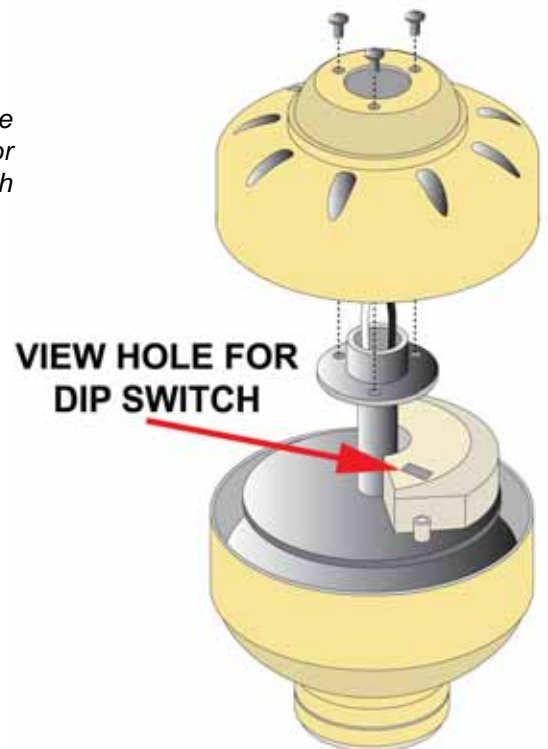

Versa-Touch Wall Controls - **CONTINUED**



VERSA•TOUCH © CHANGING FREQUENCY SETTING - DIPLESS RECEIVER

Note: All fans leave the factory set to '00000'.

You will only have to change the dip switch settings in the remote if you are using more than one fan in the same area and want to control them separately.

Step 1. At the circuit breaker or fuse box, turn the power off for the fan you want to change.

Step 2. Open the battery door of the Versa•Touch control and remove the batteries.

Step 3. Change the dip switch settings, assuring that they are different from the previously installed Versa•Touch fan.

Step 4. Re-install the batteries and the battery door on the control.

Step 5. At the circuit breaker or fuse box, turn the power back on for the fan whose frequency you are changing.

Step 6. Within 20 seconds of restoring power, push the Hi, Med, and Lo buttons (in that order).

Note: You may want to label your controls to assure you do not mix them up.

WARNING: Do not turn the power off at the circuit breaker, then back on, for the previously installed Versa•Touch fan(s), as you may inadvertently change the frequency settings for it as well.




VERSA•TOUCH CONTROL (BACK)



DIP SWITCH SET TO '10000'



DIP SWITCH SET TO '01001'

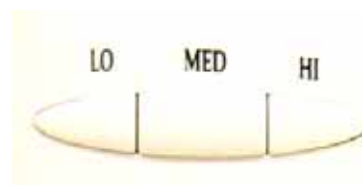

WITHIN 20 SECONDS OF TURNING THE POWER ON, PRESS IN THIS ORDER TO SET NEW FREQUENCY:

1. HI
2. MED
3. LO

VERSA•TOUCH © IF FAN DOES NOT WORK - DIPLESS RECEIVER

If the fan is not functioning after installation:

Step 1. Check to make sure that batteries are installed correctly in the control.

Step 2. Turn the power off to the fan (from the circuit breaker) for at least 5 seconds.

Step 3. Turn the power back on (at the circuit breaker) and push the Hi, Med, and Low buttons—in that order—within 20 seconds.

Step 4. The fan should now function properly.



CIRCUIT BREAKER OR FUSE BOX



PRESS IN THIS ORDER TO SET NEW FREQUENCY:

1. HI
2. MED
3. LO

Wall Controls - **CONTINUED**



W 42

VERSA - TOUCH SERIES REPAIR


FAN REMOTE CONTROL TRANSMITTER
(W42 and W43 hand held or wall mount controls)



W 43

W 42 hand held transmitter is used on fan units both with Dip switches and with no dipless in receivers.

W 43 hand held transmitter is used on fan units that feature separate down light and up light control.

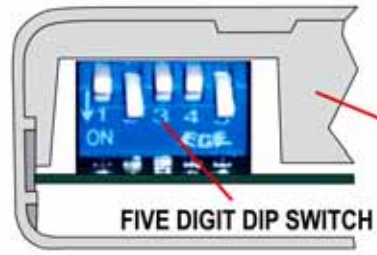


FIVE DIGIT DIP SWITCH




W 42 rear view dip switch location shown with 9 volt Alkaline battery removed.

W 43 rear view dip switches location shown with 9 volt Alkaline battery removed.

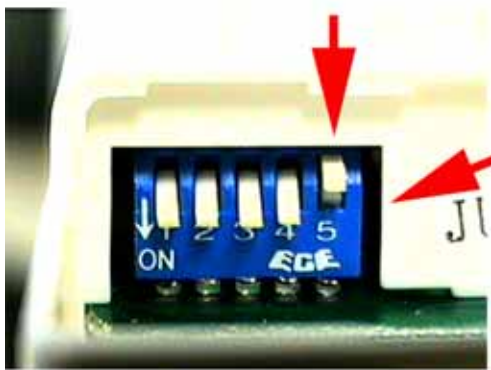

Dip Switch Settings

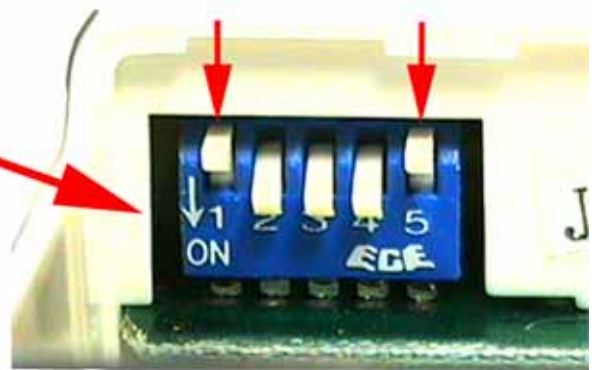

Note : For fans to operate properly dip switch number five must be set in the off or up position. Notice arrow and on position for setting guide.

Factory dip switch settings are set with dip switches number 1 and 5 in the off or up position. Number 5 must remain per factory setting. The other dip switches may be set to other positions.

Versa-Touch Wall Controls - **CONTINUED**



VERSA-TOUCH™ SERIES REPAIR


WIRING DIAGRAMS

VERSA - TOUCH

Receiver PC Board:
 Part #: 7801280 (Dip)
 7801340 (Dipless)
 7801750 (New Dipless)
 Standard W/O Coil

MOTOR:
 Part #: Call The Factory

WALL CONTROL:
 Part #: W-42 (7801140)
 W-72 (7854200)

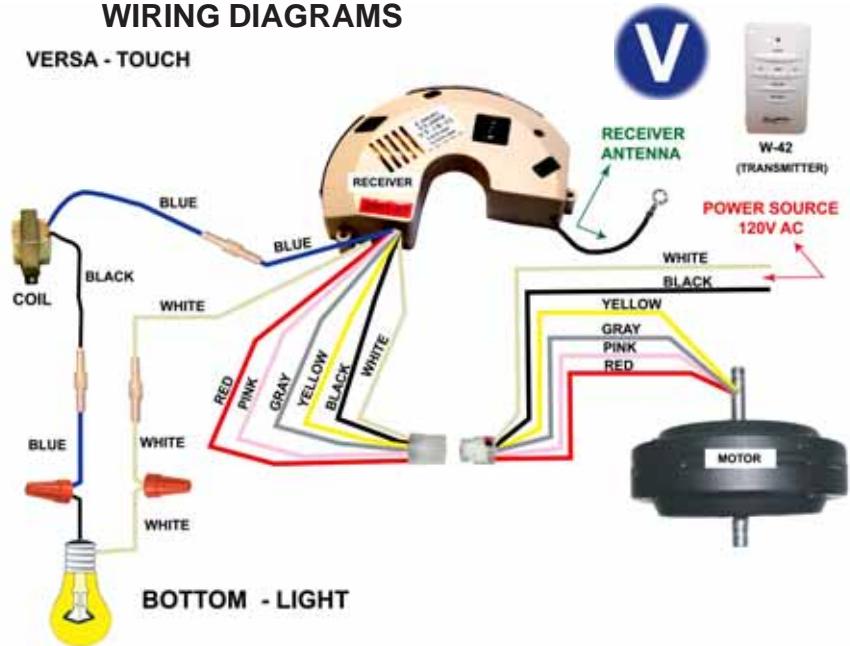

WIRING DIAGRAMS

FAN:
 Up/Down Light
 Bella

Receiver PC Board:
 Part #: 7801350 (OLD)
 7801760 (Dipless)

MOTOR:
 Part #: Call The Factory

WALL CONTROL:
 Part #: W-43 (7801170)
 W-73 (7854210)

