



3-SPEED © OPTIONAL WALL CONTROL © W-80



W-80

The industry's leading optional fan and light control, featuring 4 speeds in forward and reverse.

- Noise-free circuitry and quiet operation
- Continuously variable light dimming (300 watt max)
- 120VAC, 50/60Hz, 1.5Amp rating
- Requires special wiring (a third wire)
- Will operate one fan only
- Available in Snow White and Ivory finishes

The W-80 wall control provides separate control of fan and light with two separate knobs from a convenient wall location. The W-80 is designed to replace a standard wall switch and wall boxes with a depth of 2" or greater. Requires two hot leads from wall box to ceiling wiring box.

To install a W-80 wall control in place of an existing wall switch, follow the instructions on the W-80 package.

Operation of the fan from the wall switch is simple:

1. Turn the upper knob to the desired fan speed.
2. Turn the lower knob to the desired light setting.




CAUTION! Failure to set the pull-chain speed to HIGH can result in faulty operation of the fan and damage to the wall control. To confirm fan is set to HIGH: Turn W-80 fan speed switch to 'HI' - set fastest fan speed with pull chain.



W-80 WIRING DIAGRAM - (With Ground Wire)

WARNING: DONOT use this wiring diagram when wiring W-18 or W-28 wall controls. This will cause damage to both the PC Board and Wall Control

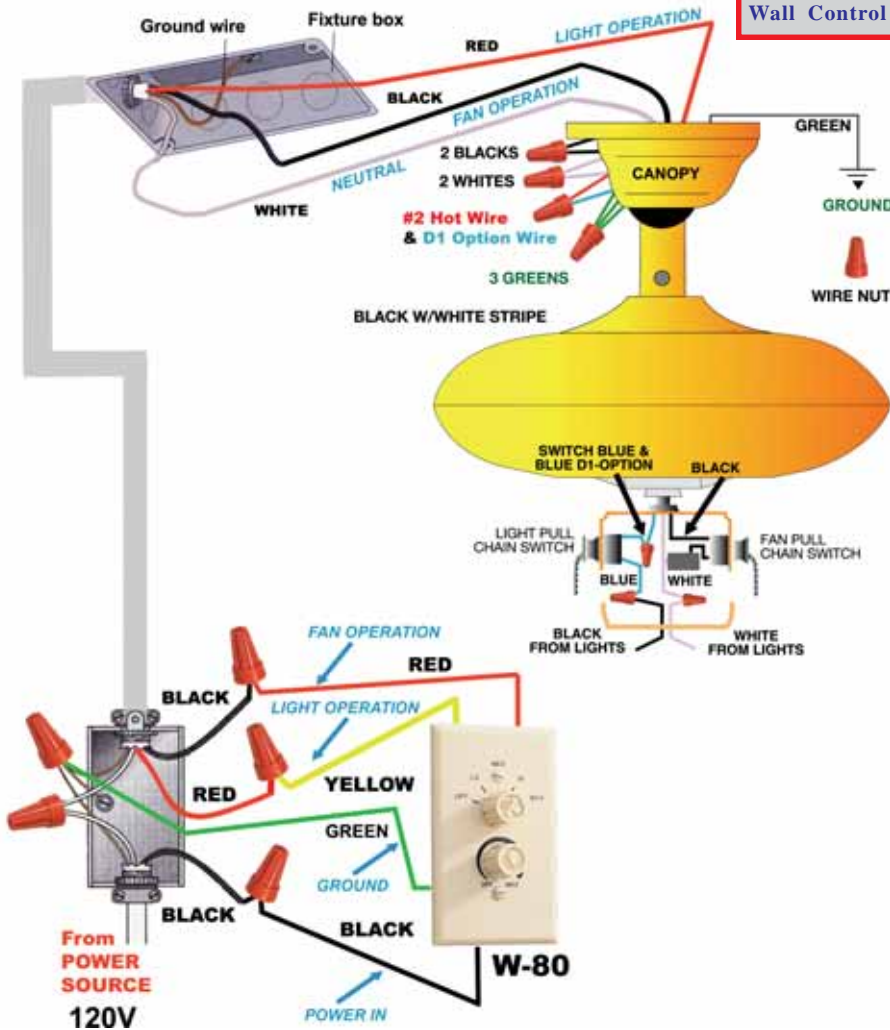

- The fan may be turned ON and OFF by the W-80 wall control.
- The lights may be turned ON and OFF by the W-80 and the intensity adjusted from low to high.
- **The fan must be supplied with two independent 120V AC supply wires.**
- Set the FAN pull chain switch to the HIGH speed setting.
- Turn the lights ON at the fan.
- The W-80 allows the choice of four (4) different speed settings.

CAUTION! Failure to set the pullchain speed to HIGH can result in faulty operation of the fan and damage to the W-80 wall control. To confirm fan is set to HIGH: Turn W-80 fan speed switch to 'HI' - set fastest fan speed with pull chain.

