


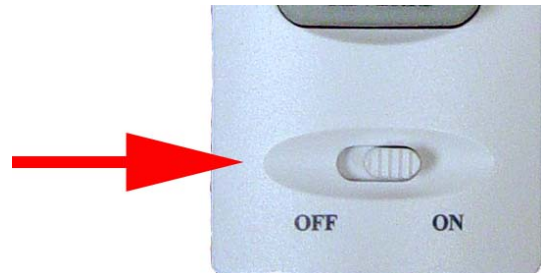

**Inteli • Touch 2™**  
**INTELI•TOUCH 2 © OPERATION - POWER**

The **POWER** switch is normally left in the on position. Always turn the power off during cleaning or servicing the fan and during thunderstorms. It is also used to exit or enter additional programs. **POWER** must be left on to retain a previously set fan speed or light level.



**INTELI•TOUCH 2 © OPERATION - SPEED CONTROL**

There are six individual speed settings for the fan; each speed is indicated by an audible tone of increasing pitch.

**To select the desired fan speed:**

1. With fan off, press and hold the button labeled **▽ FAN △** . The fan blades will start rotating at the slowest speed, and will increase in steps.
2. Release the button when the desired speed is reached.

The fan speed is now in memory and will automatically come on at the same speed each time the **▽ FAN △** button is used. To maintain this level of speed, turn the fan on by pressing **▽ FAN △** less than one second. To lower speed, turn fan off, then on by pressing and holding the **▽ FAN △** button until the desired speed is reached. When the fan is on, you may increase the speed by pressing and holding the **▽ FAN △** button until the desired speed is reached, then release it.



**FAN CONTROL ON - OFF**  
 A momentary press of the FAN button TO CHANGE SPEED  
 Press and hold FAN button longer than one second


**INTELI•TOUCH 2 © OPERATION - REVERSING AIRFLOW**

The direction of airflow can be changed from downward to upward or from upward to downward.

To reverse the airflow:

1. Make sure the **▽ FAN △** is on and blades are turning.
2. Press the **REVERSE** button.

**Note:** A four-toned signal indicates the command was accepted by the fan. A few seconds later the fan will slow to a stop and then reverse direction.

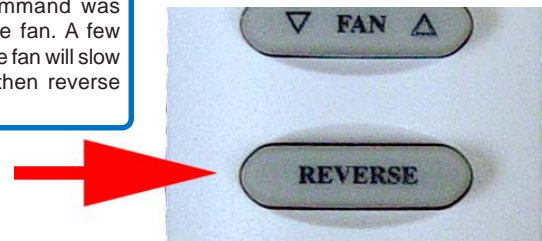



### Inteli • Touch 2™

### INTELI•TOUCH 2 © OPERATION - LIGHT

To turn the lights off and on, press and release the **▽ LIGHT △** button for less than one second.

#### To vary the light brightness:

1. With lights off, press and hold the **▽ LIGHT △** button. After one second the lights come on at their lowest level and gradually become brighter.
2. Release the button when the desired brightness level is reached.

The brightness level is now in the fan memory and will automatically come on at the same brightness the next time the **▽ LIGHT △** button is used. To maintain this level of brightness, press the **▽ LIGHT △** button for less than one second. To lower the brightness, turn the lights off, then press and hold the **▽ LIGHT △** button until the desired brightness level is reached. When the light is on, you may increase the brightness level by pressing and holding the **▽ LIGHT △** button until the desired level is reached, then release it.

**LIGHT CONTROL**

**ON - OFF**  
A momentary press of the LIGHT button

**TO CHANGE BRIGHTNESS**  
PRESS AND HOLD LIGHT BUTTON LONGER THAN ONE SECOND



### AUTOMATIC DEMONSTRATION PROGRAM

Programmed into every Intelli-Touch Series fan is an Au-tomatic Demonstration Program. It can be used to fully demonstrate and test the operation of the fan.

#### To enter the demonstration program:

1. Turn **POWER** off for at least three seconds. This will clear the fan memory ready for programming.
2. Turn **POWER** on.
3. Immediately operate the buttons in the following sequence:

**▽ FAN △ + ▽ LIGHT △ + ▽ FAN △ + ▽ LIGHT △ + ▽ FAN △**

A multi-tone signal will verify the start of the test program which proceeds as follows:

- Lights slowly increase to full intensity.
- Fan accelerates to speed three with audio tones.
- Light dims to half intensity.
- Fan accelerates to full speed with audio tones.
- Fan reverses at full speed with audio tones.
- Fan operates at full speed.
- Fan power is reversed with audio tones.
- Fan turns off with audio tones (blades coast for a short time).
- Lights turn off.

The complete cycle lasts slightly over one minute. It will continue to repeat until the **POWER** is turned off for more than three seconds, cancelling the program.

### INTELI•TOUCH 2 © OPERATION - LIGHT-MINDER® PROGRAM

The Light-Minder program automatically turns OFF the fan mounted lights after two hours.


To enter the Light-Minder Program:

1. Turn the **POWER** OFF for at least three seconds.
2. Turn the **POWER** ON.
3. Immediately operate the buttons in the following sequence:

**▽ FAN △ + ▽ FAN △ + ▽ LIGHT △ + ▽ LIGHT △**

4. A series of tones indicates this command has been accepted.

The fan and light will operate normally using the buttons to turn them on and off. But, if the lights are left on, they will automatically shut off after two hours. To cancel the Light-Minder Program, turn the **POWER** off for three seconds.

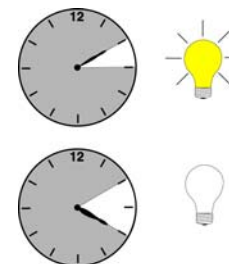

Inteli-Touch2 Operation - **CONTINUED**



**Inteli • Touch 2™**

**INTELI•TOUCH 2 © OPERATION - SAFE-EXIT® PROGRAM**

The Safe-Exit Program gives you about thirty seconds of light when you turn the lights off, enabling you to exit your home before the lights go out.

**To enter the Safe-Exit Program:**


1. Turn the **POWER** off for at least three seconds.
2. Turn the **POWER** on.
3. Immediately operate the buttons in the following sequence:

▽ FAN ▲ + ▽ FAN ▲ + ▽ LIGHT▲ + ▽ LIGHT▲

After you hear the confirming audio

tones from the fan - **immediately press** ▽ LIGHT▲

4. The lights will blink to indicate this command has been accepted. The lights will stay on for twenty seconds and then begin to dim. After a total of thirty seconds has elapsed, the lights will be off completely. To cancel the Safe-Exit Program, turn the **POWER** off for three seconds.

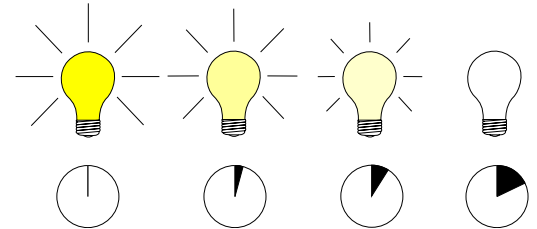

**Note:** Both Light-Minder and Safe-Exit programs can run at the same time, however the dimmer cannot be used, the light may only be turned ON/OFF.

**INTELI•TOUCH 2 © OPERATION - HOME-SAFE® PROGRAM**

The Home-Safe Program makes an unoccupied home appear occupied by turning the lights on and off at random times.

To enter the Home-Safe Program:

1. Turn the **POWER** off for at least three seconds.
2. Turn the **POWER** on.
3. Immediately operate the buttons in the following sequence:

▽ LIGHT▲ + ▽ FAN ▲ + ▽ LIGHT▲ + ▽ FAN ▲

4. A tone and flashing light indicate this command has been accepted. This program overrides all manual control of lights and fan. The lights will now be automatically cycled on and off in a controlled sequence as follows: On 1 hour, off 1/2 hour, on 2 hours, off 1 hour, on 1/2 hour then off 2 hours. This seven hour pattern will repeat continuously so that a different pattern of lighting is seen each day of the week. To cancel the Home-Safe Program, turn the **POWER** off for three seconds.



**INTELI•TOUCH 2 © OPERATION - FAN-MINDER™ PROGRAM**

The Fan-Minder feature will add to your comfort when used in the bedroom. The program reduces the speed of the fan each two-hour interval to compensate for cooling night air.

To enter the Fan-Minder Program:


1. Turn the **POWER** off for at least three seconds.
2. Turn the **POWER** on.
3. Immediately operate the buttons in the following sequence:

▽ LIGHT▲ + ▽ LIGHT▲ + ▽ FAN ▲ + ▽ FAN ▲


4. The fan will respond with three descending tones. A timer is now initiated and the fan will reduce one speed for each two-hour interval. The fan will not, however, descend below the second lowest speed.

To cancel the Fan-Minder Program, turn the **POWER** off for three seconds. You may increase the fan speed by pressing and holding the ▽ FAN ▲ button until the desired speed is reached, then release it. The fan will again reduce one speed for each 2 hour interval.

Fan-Minder (A)

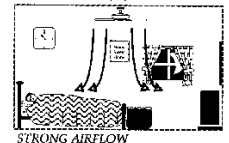

Fan-Minder (B)

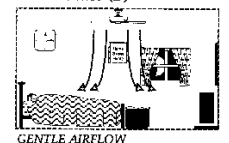



**Inteli • Touch 2™**

**INTELI•TOUCH 2 © OPERATION - REMOTE CONTROL**

Your Ineli•Touch2 fan is able to work with an optional accessory using the W-62 Remote Control in conjunction with the W-82 wall control. Please see your dealer for assistance.



**W-62 Remote Control**

PROBLEM	INTELI-TOUCH	POSSIBLE REMEDIES
<b>NO FAN OR LIGHT</b>		Check main circuit fuses, curcuit breakers, or wall switch position. Check all wire connections, making sure the power is turned off during this inspection.
<b>FAN WOBBLER OR SHAKES EXCESSIVELY</b>		Be sure canopy pin is properly set into the slot on the ball. Check the screws holding the blade holders to the fan motor. Tighten as necessary. Check the angle of the blades to make sure that a blade holder has not been bent during installation.
<b>FAN NOISY DURING OPERATION</b>		Check and tighten light fixture retaining screws, glass shade screws and/or the light bulb(s). Tighten canopy screws and mounting plate assembly. Tighten the blade to bladeholder screws and blade holders to flywheel. Make sure all screws in the motor housing are snug, but not overly tight. Check that the wire nuts inside the canopy and switch housing are not touching the metal parts or have fallen off the wire splices. Tighten or adjust as necessary.
<b>BREAK-IN PERIOD DOES NOT RUN ON LOW SPEED</b>		Let fan run at high speed for two (2) hours. If new, "break-in" may be required - run at higher speed for several days

**WHEN AC POWER IS TURNED ON FOR THE FIRST TIME, THE LIGHTS OPERATE NORMALLY, BUT W-82 WALL CONTROL OPERATION IS REVERSED: FAN BUTTON OPERATES THE LIGHTS; LIGHT BUTTON OPERATES THE FAN:** Reverse the 2 black and white striped wire connections.

**FAN OR LIGHTS APPEAR TO OPERATE BY THEMSELVES (CHANGING SPEED OR INTENSITY), WALL CONTROL OPERATION IS INTERMITTENT:**

Check AC supply for irregularities, (noise spikes, fluctuations, or failure); or circuit board assembly.

Inteli-Touch2 Operation - **END**